



PERATION 'ANUAL

TG650 TG950 TG1000



TIGER POWER MACHINE CO.,LTD.

#### 1

## SAFETY INFORMATION

EXHAUST FUMES ARE POLSONOUS. Never operate engine indoors.



FUEL IS HIGHLY INFLAMMABLE. Stop engine when refueling.



No smoking while refueling.



Take care not to spill fuel.



Never operate in rain or soow.





Keep away more than 1 meter.





Never touch with wet hands.

Ground (earth) generator.

Do not connect to commercial power outlet.

Do not connect with another.

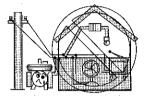


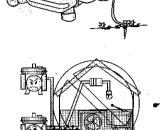

## PRE-OPERATION CHECK

Fuel tank capacity: 4L
Use oil-mixed gasoline
If not, engine will be overheated.


ণা Do not till above fuel filter top.

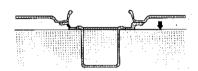

How to make mixed gasoline.

Gasoline and oil mixing

Ratio 50:1 (40:1)

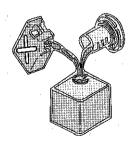

Use fuel tank cap to measure oil as


GAS 50: 1 OIL	
1 (L):0.02 (L)	(fee
2 (L):0.04 (L)	
3 (L):0.06 (L)	(Comp.)
4 (L):0.08 (L)	

Shake fuel tank before starting engine.


#### STARTING THE ENGINE

Before starting, do not connect electric apparatus.


1.Turn fuel cock lever to "ON".

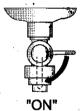

2. Turn chock lever to "1)".

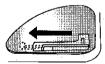


3. Turn engine switch to "ON".

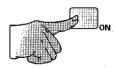

4.Pull slowly on recoil starter until engaged, then pull it briskly.




5.Return chock lever.

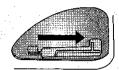


## STOPPING THE ENGINE

1.Before stopping, turn off electric apparatus.

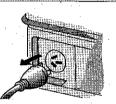

2.Turn engine switch to "STOP"

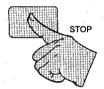

2. Z.Turn fuel cock lever to "OFF"




3. Let run empty better


- 1.Wind lead 2 or 3 turns around handle.
- 2.Start engine.
- 3.Plug into AC socket.



Connect red lead(provided as accessory) to positive (+)terminal, and black to negative(-)

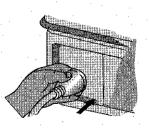

#### SAFETY DEVICES

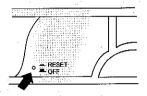

Press to reset AC or DC protector.

Reduce load within rated output if AC or DC protector (if equipped) turns off.
① "ON" ② "OFF"







## PERIODIC MAINTENANCE

Items F	Remarks	Every 50 hrs. or every month	Every 150 hrs. or every months
Spark plug:	Remove carbon Adjust gap. Replace if necessary.	•	
Air filter:	Clean Replace if necessary.		•
Fuel filter:	Clean Replace if necessary.		
Decabonigation	Clean Replace if necessary.		•

#### SPARK PLUG

1.Remove spark plug

2.Remove carbon deposits.





3.Check for discoloration. Standard: Tan color



0.7~0.8mm(0.028~0.031in)




13.8 mm Ø 0.54" M16

#### **AIR FILTER**

1.Air filter 2.Wash in solvent 3.Motor oil (SEA ≠20) 4.Squeeze out Never run engine


without element.

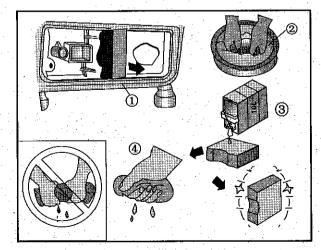


0.7~0.8mm(0.028~0.031in)

# **FUEL FIL TER**

- 1.Stop engine
- 2.Turn fuel cock lever to "OFF"
- 3.Clean with solvent.

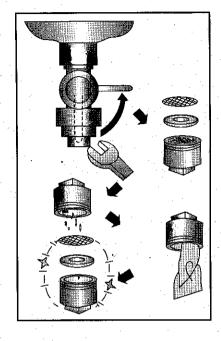

- 1.Clean in solvent.2.Wipe off
- 3.Insert.

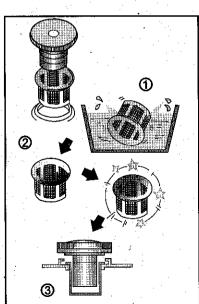


# APPLICATION RANGE

Apparatus		650	950	1000	Power factor	
AC		50Hz	~450W	~650W	~750W	4
		60Hz	~550W	~800W	~850W	]
•		50Hz	~330W	~480W	~520W	
	60Hz	~410W	~600W	~640w	0.7 ~ 0.8	
		50Hz	~390W	~570W	~600w	
-		60Hz	~480W	~700W	~730w	0.7 ~ 0.95

#### If DC output is epuipped

DC Geeeee	12V/10A	12V/10A	Max chargeable battery capacity:40A.h
-----------	---------	---------	---------------------------------------

#### **SPECIFICATIONS**

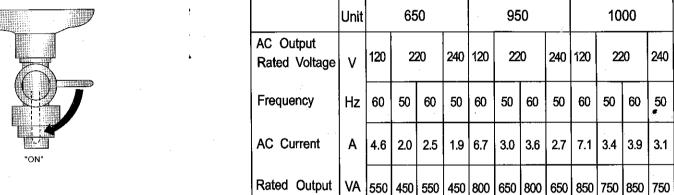

		650	950	1000
Engine Operation hours 50Hz 60Hz	Hr	8.0 6.0	6.0 4.5	4.5 3

1000

220

240

240 120

50

60 50 l

3.6 | 2.7 | 7.1 | 3.4 | 3.9 | 3.1

60




#### Scanned by Atlas Informatik.

Feel the Atlas Experience!

Check out our cool Windows Software on

https://www.atlas-informatik.ch

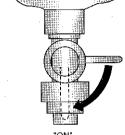

#### **ENGINE WON'T START**

1.Check fuel. Fuel cock to "ON"

- 2.Engine switch to "ON"
- 3.Check spsrk plug.
- 4.If engine still won't start, check following.

Fuel cock cloggine

Air Filter clogging

Or consult your dealer.

